 
 
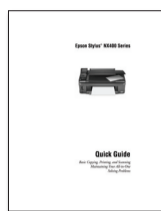 


Start Here

Epson Stylus® NX400 Series

1

Unpack

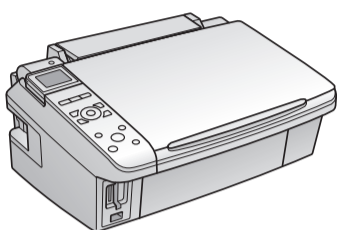

(Included for Canada only)

If anything is missing, contact Epson as described on the back.

 
Caution: Do not open the ink cartridge package until you are ready to install the ink. Cartridges are vacuum packed to maintain reliability.

Canada only: For French speakers, remove stickers from the backing sheet and place over corresponding text on the control panel.

2


Turn on the NX400 Series

- 1 Connect the power cable.

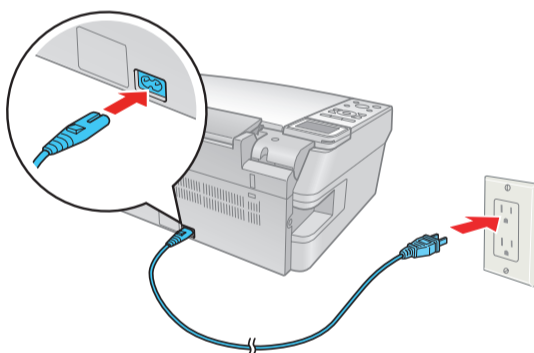

Note: Do not connect to the computer at this time.

 - 2 Press the  On button.

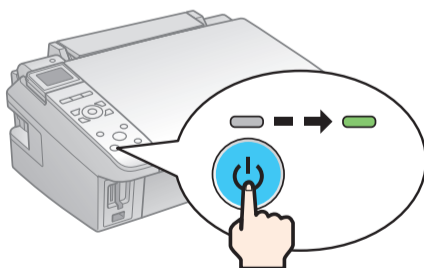

411385500

EPSON®
EXCEED YOUR VISION

 
3

Install cartridges


Note: Do not load paper yet.

1 Lift up the scanner.


2 Open the cartridge cover.

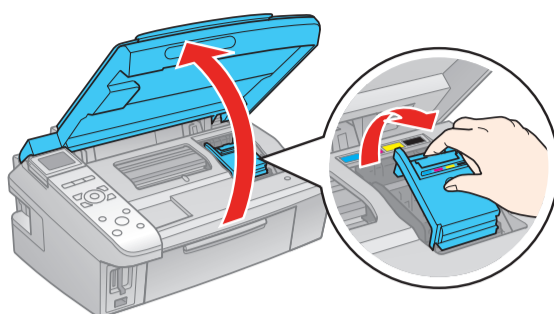

 
3 Shake the ink cartridges, then unpack them.

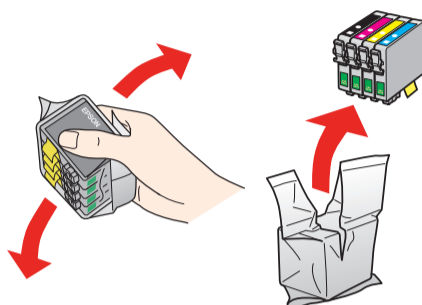

 
4 Remove only the yellow tape from each cartridge.

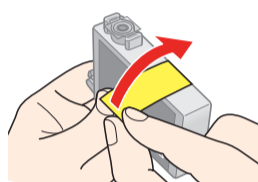

 
Caution: Do not remove any other seals or the cartridge may leak.

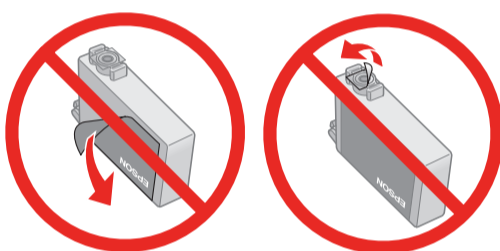

 
5 Insert the cartridges in the holder for each color.

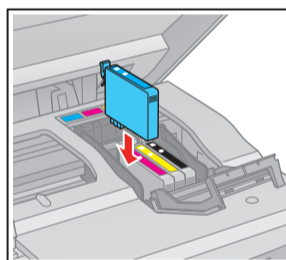

 
6 Press each cartridge down until it clicks.

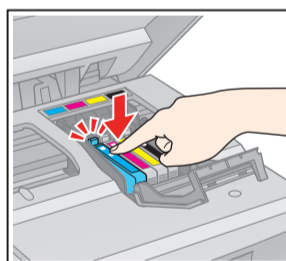

 
7 Close the cartridge cover. Press down until it clicks.

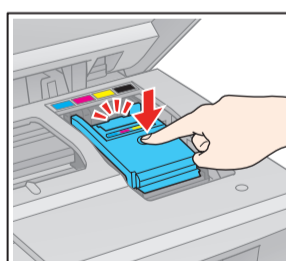

8 Lower the scanner.

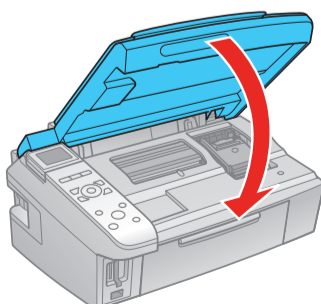 

 - 9** Press the **OK** button to charge the ink. Charging takes about 2½ minutes.

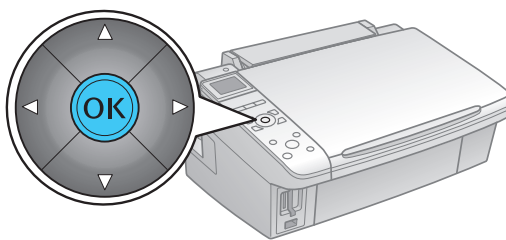


Caution: Don't turn off the NX400 Series while it is charging or you'll waste ink.

4 Change your language


You can change the language that appears on your LCD display screen from English to French, Spanish, or Portuguese.

 - 1** Press **Setup**.
- 2** Press **►** to select **Maintenance**, and press **OK**.
- 3** Press **▼** to select **Language**, and press **OK**.
- 4** Press **▲** or **▼** to select your language, and press **OK**.

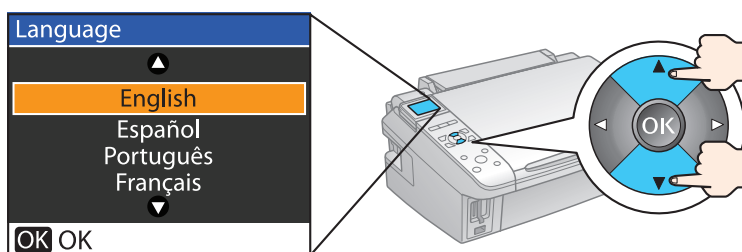


5 Load paper

 
- 1** Open the paper support and pull up the extensions.

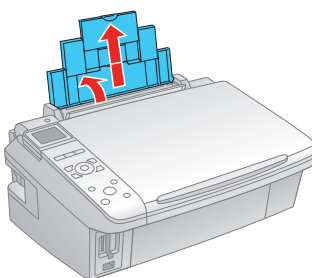

 
- 2** Open the output tray, pull out the extensions, and raise the stopper.

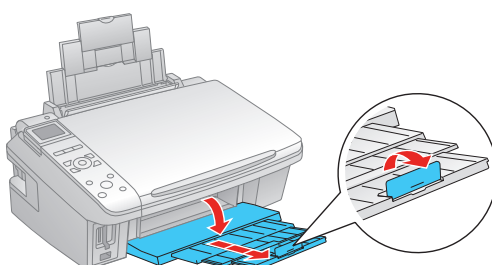


 
- 3** Squeeze the edge guide and slide it left.

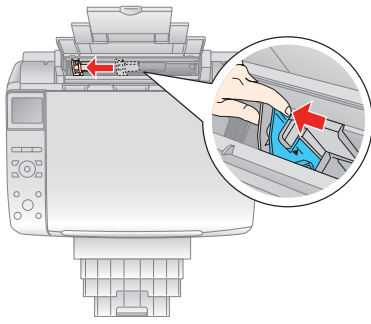

 
Tip: If the feeder guard is in the way, flip it forward.

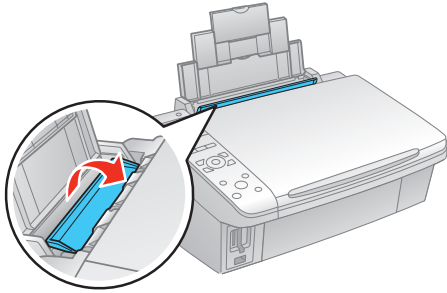

  
- 4** Load paper against the right edge and underneath the tab.

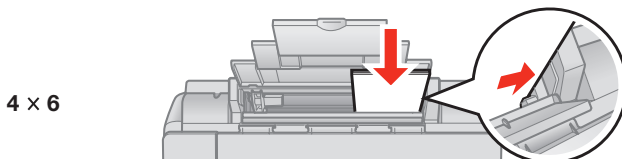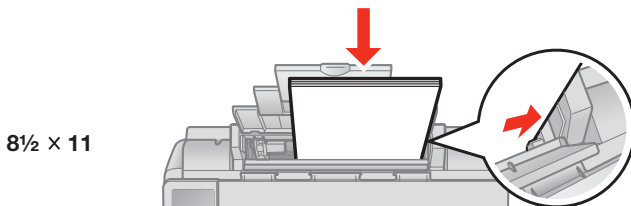

Note: Don't load the paper sideways.

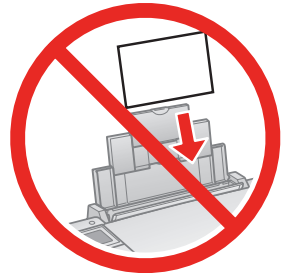 

- 5** Slide the edge guide over.

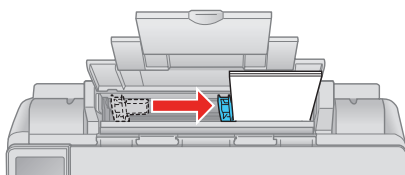 


6

Install software


Your software works with Windows® 2000, XP, XP Professional x64 Edition, Windows Vista® and Mac OS® X 10.3.9, 10.4.x, and 10.5.x.

Windows

 - 1 Make sure the NX400 Series is **NOT CONNECTED** to your computer.

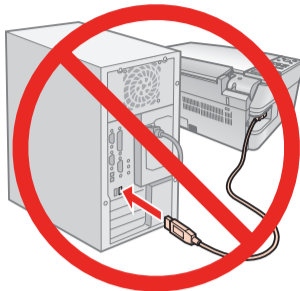


 Note: If you see a Found New Hardware screen, click **Cancel** and disconnect the USB cable.

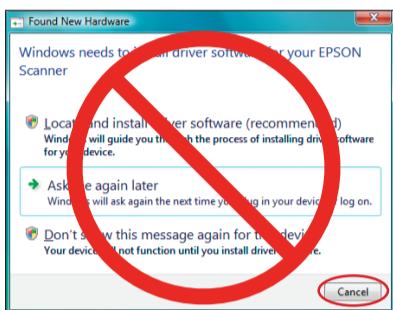

- 2 Insert the NX400 Series CD.

 
With Windows Vista, if you see the AutoPlay window, click **Run Esetup.exe**. When you see the User Account Control screen, click **Continue**.

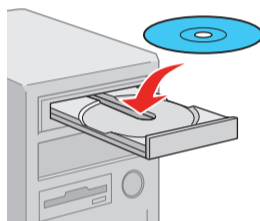

- 3 Click **Install** and follow the on-screen instructions.



 - 4 When prompted, connect the USB cable. Use any open port on your computer.

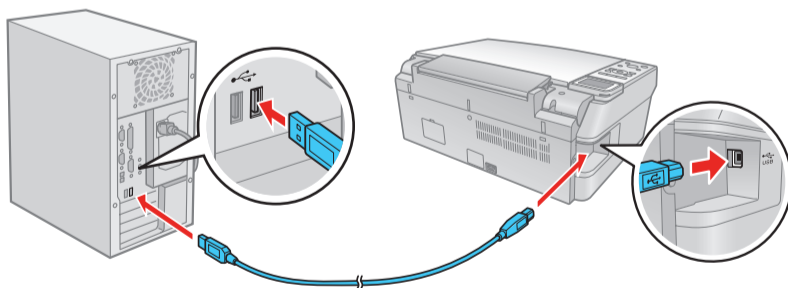


Note: If installation doesn't continue after a moment, make sure you securely connected and turned on the NX400 Series.

- 5 Follow the on-screen instructions to install the rest of the software and register your NX400 Series.
- 6 When you're done, remove the CD.

You're ready to copy, print, and scan! See the *Quick Guide* or your on-screen *User's Guide* for instructions.


Macintosh

 - 1 Insert the NX400 Series CD.

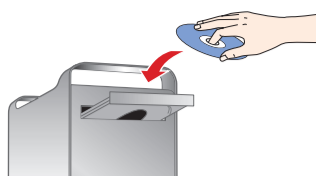


- 2 Double-click the  **Epson** icon.

 - 3 Click **Install** and follow the on-screen instructions.

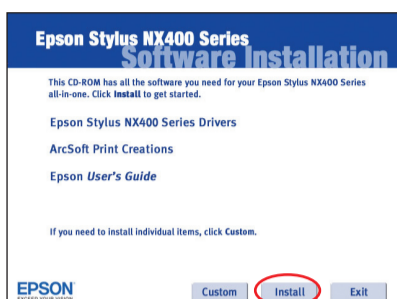

 
- 4 When prompted, connect the USB cable. Use any open USB port on your Macintosh. Make sure the NX400 Series is securely connected and turned on.

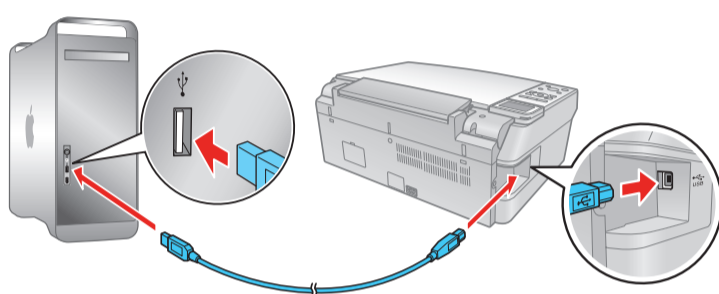


- 5 Mac OS X 10.5 users: skip to step 10.

Other users: continue with step 6.

 - 6 When you see this screen, click **Open the Printer List**.

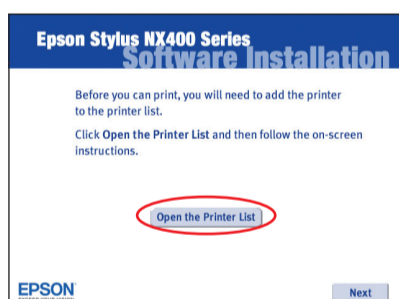

 - 7 Follow the steps on the right of the screen to add the NX400 Series.

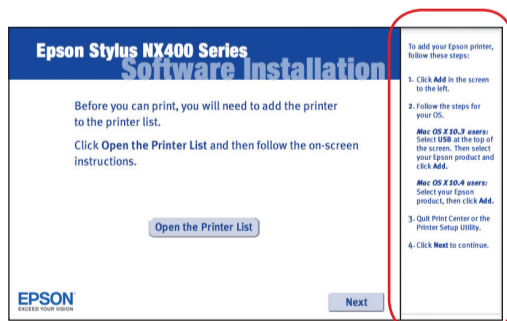


- 8 Click **Next** again, if necessary.

- 9 Follow the on-screen instructions to install the rest of the software and register your NX400 Series.

- 10 When you're done, eject the CD.

You're ready to copy, print, and scan! See the *Quick Guide* or your on-screen *User's Guide* for instructions.

 Control panel

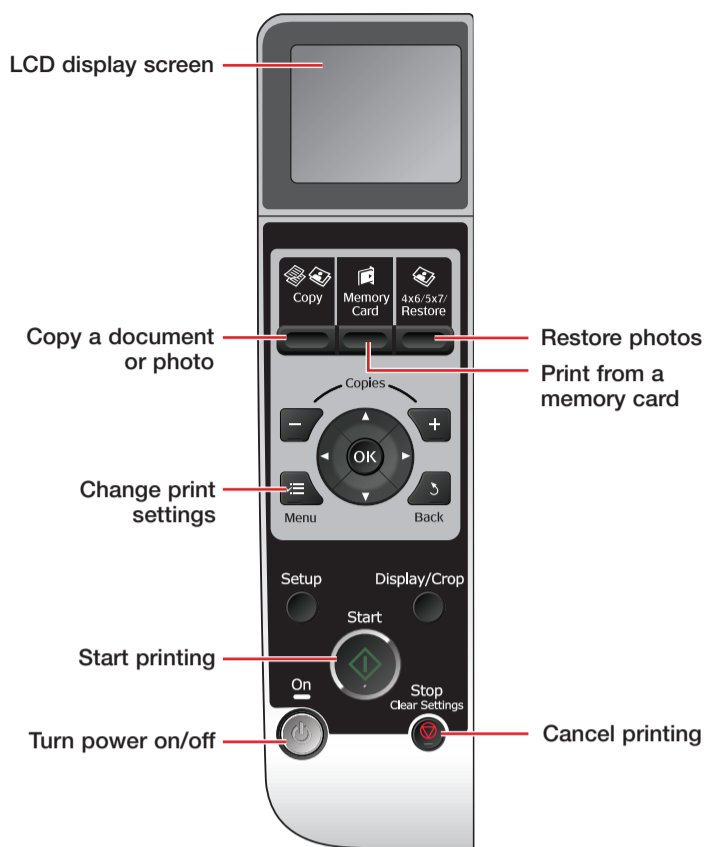

Any questions?

 
Quick Guide

Basic instructions for copying, printing, and scanning.



On-screen Epson Information Center

Click the desktop shortcut for easy access to the NX400 Series *User's Guide*, FAQs, online troubleshooting advice, and software downloads. You can also purchase paper and ink.

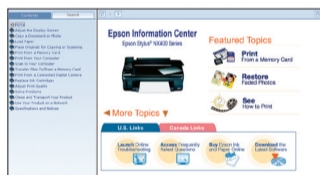

On-screen help with your software

Select **Help** or **?** when you're using your software.

Epson Technical Support

Internet Support

Visit Epson's support website at epson.com/support and select your product for solutions to common problems. You can download drivers and documentation, get FAQs and troubleshooting advice, or e-mail Epson with your questions.

Speak to a Support Representative

Call (562) 276-4382 (U.S.) or (905) 709-3839 (Canada), 6 AM to 6 PM, Pacific Time, Monday through Friday. Toll or long distance charges may apply.

Software Technical Support

ArcSoft Print Creations™
(510) 440-9901

Web: www.arcsoft.com/support

Need paper and ink?

Want great results? Simple. Use genuine Epson paper and ink. For the right supplies at the right time, you can purchase them at Epson Supplies CentralSM at www.epson.com/ink3 (U.S. sales) or www.epson.ca (Canadian sales). You can also purchase supplies from an Epson authorized reseller. To find the nearest one, call 800-GO-EPSON (800-463-7766).



Epson Photo Paper Glossy

Bright, instant-drying paper for great looking photos and projects.

See the entire line of Epson photo papers at Epson Supplies Central.

Genuine Epson inks

Look for the numbers below to find your cartridges. It's as easy as remembering your number!



69 or **88** Black

69 or **88** Magenta

69 or **88** Cyan

69 or **88** Yellow

68 Try the Epson High Capacity 68 black cartridge available at www.epson.com/highcapacity (U.S. sales) or www.epson.ca (Canadian sales).

Epson and Epson Stylus are registered trademarks, Epson Exceed Your Vision is a trademark, and Supplies Central is a service mark of Seiko Epson Corporation. DURABrite is a registered trademark of Epson America, Inc.

General Notice: All other trademarks are the property of their respective owners. Epson disclaims any and all rights in those marks.


This information is subject to change without notice.

© 2008 Epson America, Inc. 3/08

CPD-25345

Cut out the card to the right and keep it with you when purchasing replacement ink cartridges.

Epson NX400 Series Ink Cartridges



69 or **88** Black

69 or **88** Magenta

69 or **88** Cyan

69 or **88** Yellow

68 High Capacity Black